

Modbus Commucation

Sr.No.	Parameter Name	Address Map (Hex)	Divide by
1	Voltage - R	3037	10
2	CURRENT -R	303A	10
3	PF - R	303D	1000
4	HZ	3040	1000
5	KW - R	3041	1000
6	KVA - R	3044	1000
24	Blank (2 Byte)	304C	100
25	BALANCE SIGN (1 BYTE BIT 1),KW OR KVA LOAD SELECTION (1 BYTE BIT 2), EB/ DG/Solar Selection (1 BYTE)		NA
26			
27			
10	BALANCE AMOUNT	304D	NA
11	Intant Mode Kwh (EB,DG,SL)	304E	10
12	Current Month MD 2bYTE	304F	((MD *2)
13	Hex File Version (1 BYTE)		
14	MSN (MSB BYTE)		
15	Meter Sr. No (NEXT 2 BYTE)	3050	NA
16	Happy Day Information (1 Byte)		